

CALIBRATION STEPS USING

SMART-CAL 360

for the **SENSIT® GOLD G3**



Allow the GOLD G3 to run for 5 minutes before calibrating

Connect instrument hose to GOLD G3


Press **A** for 1-2 seconds and release. Smart-Cal should appear on screen. Wait for "Enabled" to display

On the station, press CALIBRATION

If more than one GOLD G3 is in Smart-Cal Mode, a list of serial numbers will appear on the station. The user will select the device to be calibrated

The process will begin automatically including a flow block and autozero

Refer to the instruction manual for manual calibration steps

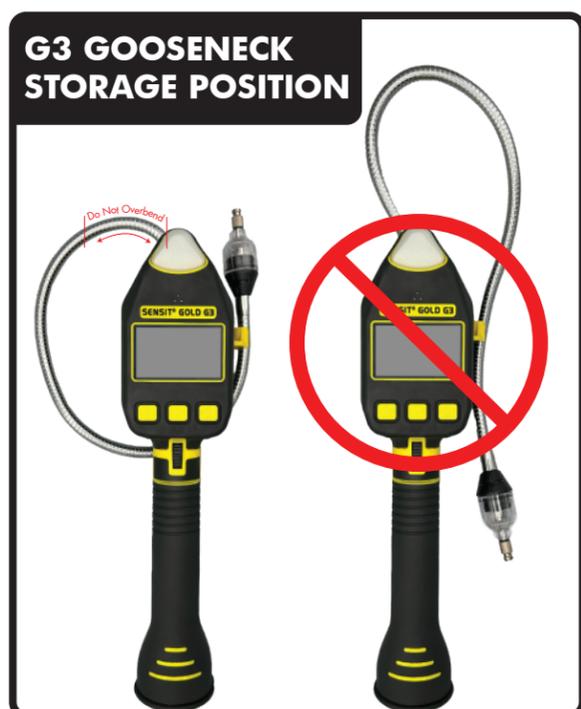

SENSIT
Technologies



Brochure



Instruction Manual



Safety Manual